

TOUCH PANEL INSTRUCTION



1.TURN ON/OFF

 


2.TEMPERATURE SETTING



Click on the temperature setting area on the right side of the main page,pop up the keyboard, enter the targettemperature, and then click enter

3.PARAMETER SETTING



On the main page, click on "MENU"-"ParaSet" in the upperright corner of the screen to enter the parameter settings. Click onthe corresponding parameters to enter the corresponding parameter settings. Click on left'or'right'to turn the page